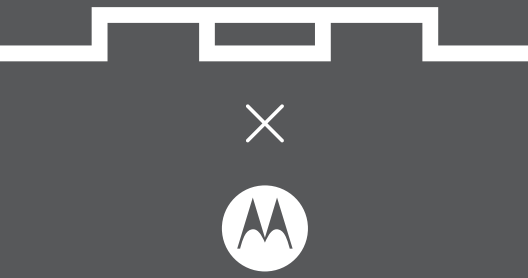

DECK
USER MANUAL

CONGRATULATIONS. YOU'RE ENTERING A NEW WORLD OF SOUND.

PREPARE TO:

Experience music like you've never heard or felt before.

Play the mix you want or swap out DJ duties with up to four friends.

Choose indoor or outdoor EQ for sound sculpted to your location.

Make and take crystal clear calls on your DECK Bluetooth speaker.

OVERVIEW

THE GOODS 4
POWER 6
CONNECT 8
SINGLE USER MODE 10
HEIST MODE™ 12
ADVANCED 14
TROUBLE 15
SAFETY, REGULATORY & LEGAL 15

CAUTION

Before using this product, please read the safety, regulatory and legal information in the legal booklet.

THE GOODS

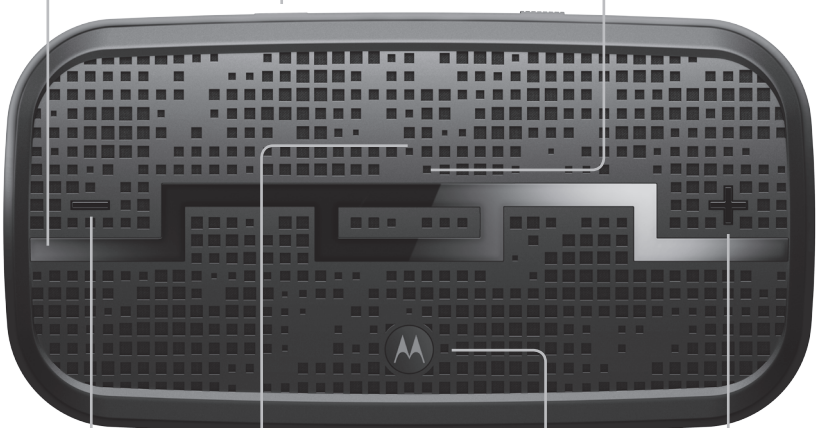
STATUS LIGHT
POWER BUTTON
Press & hold to turn on or off.
NFC READER LOCATION
Touch device here to pair.
VOLUME DOWN
MICROPHONE
MULTI-FUNCTION BUTTON
Press to play & pause music, answer & end calls, Outdoor Mode, Heist™ Lock.
VOLUME UP

POWER

First thing's first: give DECK a charge. Plug the small end of the USB into the micro USB port located on the side of DECK. Then plug the large end into the included AC adaptor and plug that into the wall outlet.

Your speaker needs power, so load it all the way before you use it. It is fully charged when the status light turns green.

NOTES

For optimum block-rocking power, always use the charger and cable included in this package.

Turn off the speaker when you're not using it.

CAUTION

This battery is designed to last the life of your device. So you don't need to take it out or mess with it. If you try to remove or replace your battery it will void your warranty and could cause injury and damage your device.

If you suspect battery trouble, see "Trouble" section.

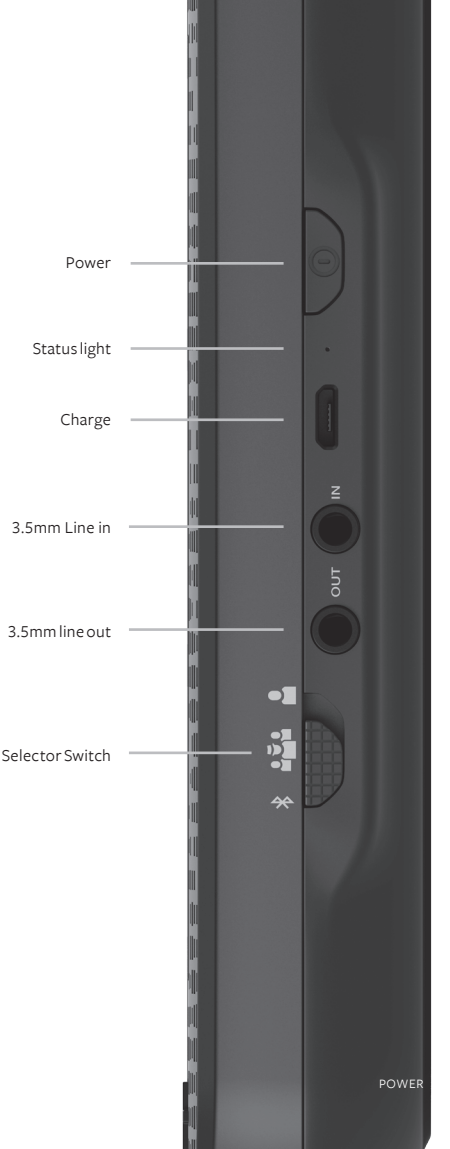

CONNECT

Now let's get DECK and your device talking to each other.

There are two ways to pair it: the Bluetooth® EASYPAIR™ Method and the NFC™ way. EASYPAIR™ works for everybody. NFC™ people — you know who you are.

EASYPAIR™ METHOD

STEP 1

Turn on Bluetooth® on your device.

STEP 2

Turn on DECK and it will automatically go into pairing mode.

STEP 3

Go to the Bluetooth® menu on your device and select DECK. Enter 0000 if prompted.

STEP 4

When the device and DECK are connected, you'll get a pairing complete tone.

NOTE

Device paired while in HEIST MODE™ will only pair for music play, if you wish to also use your device for phone calls, please pair in Single User Mode.

NFC™

STEP 1

If you have an NFC enabled device, turn on Bluetooth® and NFC.

STEP 2

Turn on DECK.

STEP 3

Tap your NFC enabled phone to the top of DECK; and like magic, the device tells you when pairing is complete.

NOTE

The NFC™ reader location and function can vary between devices. See your device user's guide for more details. If you are having difficulty pairing use the EASYPAIR™ mode.

SINGLE USER MODE

To activate Single User Mode, slide the selector switch to .

Single User Mode lets you stream music from your phone directly to DECK for unrivaled sound quality. If you want to make or receive a phone call, DECK seamlessly converts to a fully functioning speakerphone.

MUSIC — HOW TO DO STUFF

Stream music from your device to DECK by starting and controlling music playback from the device. DECK works with all of your favorite music apps.

Music will automatically pause when you make or receive a call and will resume when the call ends.

TO	PRESS
Play/Pause music	The button once.
Skip to next track	The button two times.
Skip to previous track	The button three times.
Turn the volume up or down	Volume +/– on DECK or your device one or more times.
Switch between Indoor and Outdoor EQ mode	The button and hold until you hear "indoor" or "outdoor".
Hear remaining battery life	Both volume buttons while music playback is paused.

CALL

TO	PRESS
Answer a call	The button.
Reject a call	Either volume button and hold until you hear a tone.
Make a voice dial call	The button and hold to activate your phone's voice commands.
Mute or unmute a call	The volume buttons at the same time and hold until you hear **"mute on"** or **"mute off."**
End a call	The button.

STATUS LIGHT

The status light next to the power button shows Bluetooth® and battery status. Here's a guide to reading it.

IF THE LIGHT IS	YOUR SPEAKER IS
Flashing blue	Powered on & searching for a device.
Flashing green	Incoming calls
Steady blue for three seconds, then off	Connected to a device.
Red	Charging, and at low power.
Yellow	Charging, and at medium power.
Green	Plugged in and fully charged.

HEIST MODE™

Enjoy music with your friends.

HEIST MODE™ let's you connect up to five mobile devices to DECK and have everyone take turns playing their favorite mixes.

To activate HEIST MODE™, slide the selector switch to .

NOTE
HEIST MODE™ is all about music. Phone calling features are not available in this mode.

CONNECTING DEVICES

Connect each device to DECK as normal. You don't have to turn DECK off to connect a new device as long as you do it within minutes of turning on DECK.

To connect a new device after five minutes have passed, slide the selector switch to to put DECK back into Bluetooth® discoverable mode for another five minutes.

The SOL REPUBLIC logo illuminates in different colors as each device is paired to DECK.

To reconnect using previously connected devices, just turn them on. You'll see the logo flash when connection is reestablished.

NOTE
If the device list becomes full after you have left the party, you may be required to complete the pairing process again.

PLAY MUSIC

Once you and your friends are connected, just push play — the first one starts the party. You control the party as long as your DJ skills don't run out.

Others can join in by simply hitting play on their device. You'll know who's in charge by the changing color of the LED lights on DECK.

Avoid getting heisted by pressing the button. To unlock it, hit the button again.

NOTE
The button will not control music while in HEIST MODE™

NOTE
Each mobile device gets a unique color when it connects to the speaker. The LED-illuminated SOL REPUBLIC logo indicates which device is currently playing.

ADVANCED

LINE IN & DAISY CHAIN/LINE OUT

LINE IN
To connect DECK to play music from a non-Bluetooth® enabled device using the included 3.5mm to 3.5mm audio cable. Bluetooth® connectivity is disabled while an audio cable is plugged into the "IN" port.

DAISY CHAIN/ LINE OUT
Connect multiple DECKS together by inserting the supplied audio cable into the Line Out jack on your DECK then into the Line In on another DECK. Connect as many together as you want. Only devices connected to the first DECK will play music.

You can also connect DECK to an external speaker or receiver using the included 3.5mm to 3.5mm audio cable. To mute DECK but still allow audio output, just press the +/– buttons.

BATTERY READOUT
To see how much music play-time is left on your speaker, press the Volume Up and Volume Down buttons.

SETTINGS

Press and hold the button while turning on DECK, then follow the voice prompts to turn these select features on/off:

RESTORE FACTORY SETTINGS
Reset default factory settings on DECK.

CAUTION
This feature erases all device pairing information stored on DECK.

TROUBLE

DECK DOESN'T ENTER PAIRING MODE
Turn DECK off then on again.

MY PHONE DOESN'T FIND DECK WHEN SEARCHING
Turn DECK off then on again, or when in Heist Mode™, slide the switch to the .

DECK CONNECTED BEFORE, BUT NOW IT'S NOT WORKING
Make sure your phone is on and the phone's Bluetooth® feature is turned on. If the Bluetooth® feature was turned off or was turned on only temporarily, try restarting the Bluetooth® feature and pair your phone and speaker again.

Still not working?
Got more questions?

Give Us a Shout
We're here to help.

SUPPORT
The following are a set of resources to ensure you get the most out of your SOL REPUBLIC product.

If you are experiencing issues at any time, please visit SOLREPUBLIC.COM/SUPPORT, contact us on Twitter (@SOLREPUBLIC), or call us at 877.400.0310

To acquire a printable version of this warranty, please visit SOLREPUBLIC.com/warranty

For customer service inquiries, please email support@SOLREPUBLIC.com

SOL REPUBLIC ×

SOUNDTRACK OF LIFE™